




Solid Core CT for Branch Circuit Monitoring JCT050-XXX-V or A

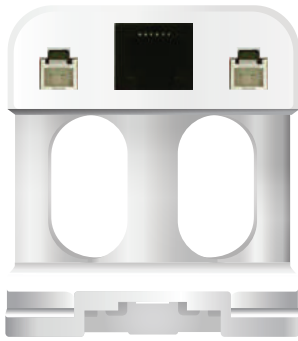

- Single Phase measuring current transformers.
- Ranges: 30 to 100A (333mV & 100mA Secondary)
- Cable aperture : 15.5 x 27mm
- RJ12 socket for use with our EASYMODULAR multi channel meters
- Panel / DIN Rail Mounting

JCT060-XXX-V or A



- Single Phase measuring current transformers.
- Ranges: 60 to 160A (333mV & 100mA Secondary)
- Cable aperture : 17 x 27mm
- RJ12 socket for use with our EASYMODULAR multi channel meters
- Panel / DIN Rail Mounting

Dimensions

How to Order / Model Reference

eg JCT050-000/333mV
JCT050 100mA

Primary Current
Select code from ratio table

Secondary Voltage 333mV

Secondary Current 100mA

Current Transformer Ratios

Primary Current (A)	Metering Burden(VA)			Code
	cl. 0.25	cl. 0.55	cl. 1	
30			0.033	030
50			0.033	050
60		0.033		060
75	0.033			075
100	0.033			100

333mV / 100mA Secondary

Dimensions

How to Order / Model Reference

eg JCT060-000/333mV
JCT060 100mA

Primary Current
Select code from ratio table

Secondary Voltage 333mV

Secondary Current 100mA

Current Transformer Ratios

Primary Current (A)	Metering Burden(VA)			Code
	cl. 0.25	cl. 0.55	cl. 1	
60			0.033	060
75			0.033	075
100			0.033	100
125	0.033			125
150	0.033			150
160	0.033			160

333mV / 100mA Secondary